



A - MEASURE AND CUT FRAME

Measure the area and cut each aluminium section to length using a hacksaw or a mitre saw with a metal cutting blade

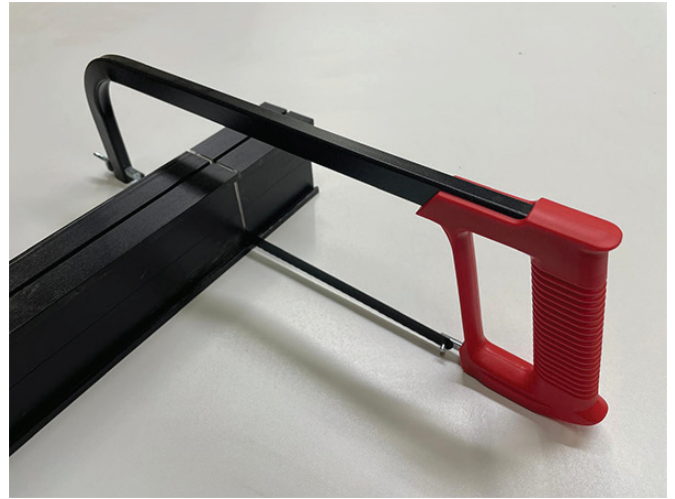


B - POSITION THE FRAME LAYOUT

Lay out and square the frame on the ground first and confirm all the measurements and lengths are accurate, making sure to keep all joists no more than 300mm apart. This will ensure proper support and spacing for the decking boards

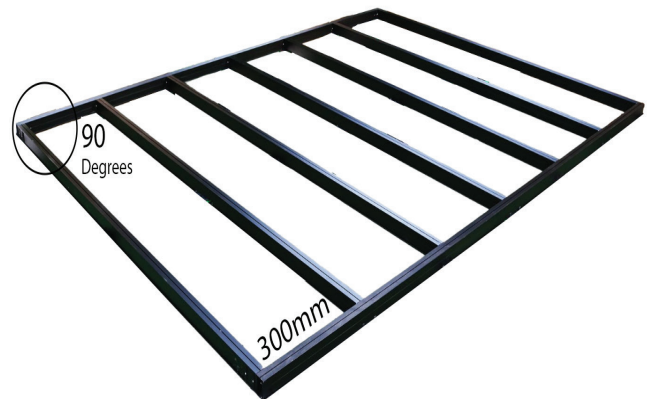


C - INSERT PATENTED BRACKETS

Slide each unique patented bracket into the channel located on the side of the aluminium joist. Rotate the bracket by hand until it clicks firmly into place. The bracket will then slide along the channel and align precisely to the left or right of the joist

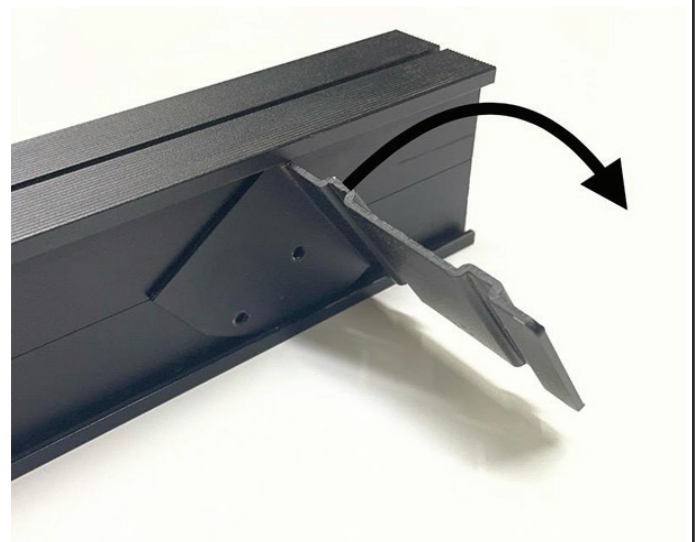

D - JOIN FRAME TOGETHER

Assembling the frame is straight forward thanks to the recessed alignment grooves running along each component, which ensure a perfect alignment every time. We supply self drilling screws for quick installation, however we strongly recommend pre-drilling pilot holes with a 2.5mm HSS drill bit

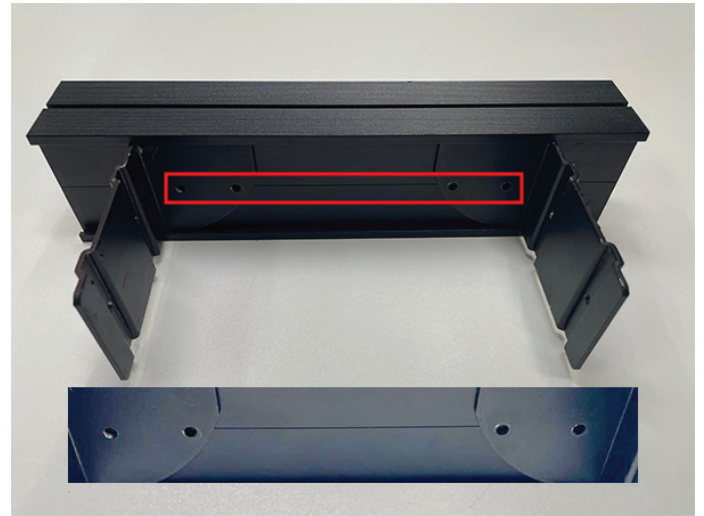

E - FIXING THE DECKING

Aligning the starter clips and decking clips is effortless thanks to the alignment grooves which run along the top face of each joist. Use these as a guide for perfect alignment every time

